

AUTOMATIC SLACK ADJUSTERS MOUNTING AND MAINTENANCE

While mounting the automatic slack adjusters, please follow the below instructions and drawings. It is very important to keep all the external parts of the slack adjusters clean and to lubricate them once a month by the greaser. For the right functioning you must apply the return spring, supplied with the slack adjuster, and make sure that it is always in traction. At regular intervals check that the anchor plate is well fixed on the axle's support. Moreover make sure that all the parts which are operated by the slack adjusters are in good conditions.

