

## MANUAL SLACK ADJUSTERS

### MOUNTING AND MAINTENANCE

While mounting the manual slack adjusters on the axle, it is important to put them in a way that the brake direction is the one indicated by the indicator forged on the body.

The anchor plate and the hexagon, which serve for the manual adjustment, have to be on the opposite position of the brake chamber. This particular attention to the positioning of the slack adjusters is necessary especially for the right- and left-bent models, with the exception of the types 1758 and 1759 which, for the particular use, are suitable also for the upside down mounting. Moreover remember to assemble always the return spring and to lubricate, by the greaser, the slack adjusters once a month or according to their use.

